Miele

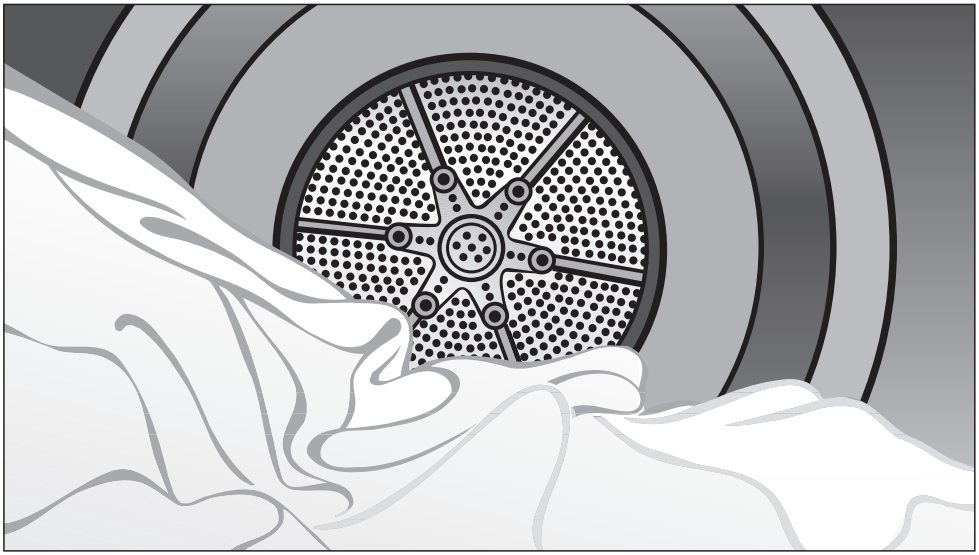

Operating instructions for condenser tumble dryer T 4804 C allerdry

To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

en - GB

M.-Nr. 07 729 440

Caring for the environment

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation!

Rather than just throwing these materials away, please ensure they are offered for recycling.

Disposal of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

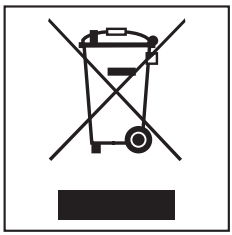

Please dispose of it at your local community waste collection / recycling centre or contact your Dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

Energy saving tips

To avoid unnecessarily long drying times and high consumption of energy:

– Make sure that your laundry is thoroughly spun before drying.

  The higher the spin, the greater the savings that can be made in energy and time during drying.

– Load according to the optimum amount of laundry recommended for the programme being used (see Programme chart).

  Underloading is uneconomical. Overloading gives a poorer quality of drying and may cause unnecessary creasing.

– Make sure the room in which the dryer is located is well ventilated.

– Make sure the fluff filters are clean before using the dryer.

– Check the condenser unit from time to time and clean it when necessary.

Contents

Caring for the environment 2

Warning and Safety instructions 6

Operating the tumble dryer 10
Control panel 10

How the dryer works 12

Notes on laundry care 13
Care symbols 13
Tips on drying 13

How to dry correctly 14
Brief instructions 14

Extra options / Delay start 17
Low temperature 17
Buzzer 17
Delay start 17

Programme chart 18

Changing the programme sequence 22
Once a programme has started 22
- changing the programme 22
- cancelling the programme and then selecting a different programme 22
- cancelling the programme and then removing the laundry 22
Altering Delay start 22
Adding or removing laundry after a programme has started 22
Time remaining 22

Electronic system lock 23

Contents

Cleaning and care 24
Emptying the condensed water container 24
Cleaning the fluff filters 25
Cleaning them whilst dry 25
Cleaning them with water 26
Cleaning the tumble dryer 27
Hygiene filter 28
Replacing the hygiene filter 28
Resetting the filter counter after fitting a new filter 29
Cleaning the condenser unit 30
Removing the condenser unit 30
Checking the condenser unit 31
Cleaning the condenser unit 31
Replacing the condenser unit 32

Problem solving guide 33
Check and fault messages 33
Other problems 36
Changing the lamp 40

After Sales service 41
Repairs 41
Future updates (PC) 41
Appliance guarantee 41
Optional accessories 41

Installation and connection 42
Front view 42
Installation site 43
Transporting the dryer to its installation site 43
Building under a continuous worktop / in a row of kitchen units 43
Levelling the dryer 44
Room in which the dryer is located 45
Washer-dryer stack 45
Before moving the dryer again
(e.g. when moving house) 45

Contents

External condensed water outlet 46
Setting up the drain hose 46
Connection to a sink drain outlet 47
If you no longer wish to use an external condensed water outlet 47

Electrical connection 48
Electrical connection U.K. 48

Consumption data 49

Technical data 50

Programmable functions 52
Altering the residual moisture level in the Cottons programme 52
Altering the residual moisture level in the Minimum iron programme 53
Anti-crease 54
Altering the volume of the buzzer 55
Altering the standard drying level in the Automatic programme 56
Extending the cooling down time 57
Standby 58
Memory function 60
Clean out airways indicator 61
Keypad tone 62
Adjusting the dryer's electronics for very soft water 63
Extending the range of the drying levels 64

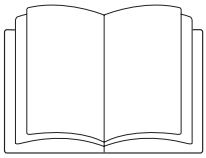

▶ It is **essential** to read these instructions.

This tumble dryer conforms to current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the tumble dryer, please read these instructions carefully before using it for the first time. They contain important information on its safety, installation, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

Correct application

▶ This tumble dryer is not designed for commercial use. It is intended for use in domestic households and in similar working and residential environments such as:

– Shops

– Offices and showrooms

and by residents in establishments such as

– Hostels and guest houses

▶ It must only be used as a domestic appliance to dry items which have been washed in a water solution and which are marked on the manufacturer's care label as being suitable for tumble drying. "Dry cleaning kits" for freshening up garments in a tumble dryer are increasingly available on the market. If using, do so at your own risk, and follow the instructions provided on the packaging.
Any other usage is not supported by the manufacturer and could be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation of the tumble dryer..

▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they are supervised whilst using it or have been shown how to use it correctly by a person responsible for their safety.

Safety with children

▶ Keep children away from the tumble dryer at all times. It is not a toy! To avoid the risk of injury do not allow them to play on or near it or to play with its controls. Supervise children whilst you are using it.

▶ Older children may only use it if its operation has been clearly explained to them, and they are able to use it safely, recognising the dangers of incorrect use.

Technical safety

▶ Before setting up the tumble dryer, check it for any externally visible damage.
Do not install or use a damaged tumble dryer.

▶ Before connecting the tumble dryer, ensure that the connection data on the data plate (voltage and connected load) match the mains electricity supply. If in any doubt, consult a qualified electrician.

▶ The electrical safety of this tumble dryer can only be guaranteed when continuity is complete between it and an effective earthing system which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and regularly tested, and where there is any doubt the household wiring system should be inspected by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

▶ Do not connect the tumble dryer to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the tumble dryer (e.g. danger of overheating).

▶ Unauthorised repairs could result in unforeseen dangers for the user, for which Miele cannot accept liability. Repairs should only be undertaken by a Miele approved service technician. Ensure current is not supplied to the tumble dryer until after maintenance or repair work has been carried out.

▶ Faulty components must only be replaced by genuine Miele original spare parts. Only when these parts are fitted can the safety standards of the tumble dryer be guaranteed.

▶ If the connection cable is faulty it must only be replaced by a Miele approved service technician to protect the user from danger.

▶ In the event of a fault or for cleaning purposes, the tumble dryer is only completely isolated from the electricity supply when:

– it is switched off at the wall socket and the plug is withdrawn, or
– it is switched off at the mains, or
– the mains fuse is disconnected, or
– the screw-out fuse is removed (in countries where this is applicable).

▶ This tumble dryer may only be used in mobile installations such as ships if a risk assessment of the installation has been carried out by a suitably qualified engineer.

▶ In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the tumble dryer and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

▶ Do not make any alterations to the tumble dryer, unless authorised to do so by Miele.

Correct use

▶ To prevent the risk of fire, the following textiles must not be dried in this tumble dryer:

– items which have not been washed.

– items, such as workwear, which have not been thoroughly cleaned and which are still soiled with grease, oil or other deposits (such as cosmetics, lotions etc).
If items have not been thoroughly cleaned there is a danger that these might ignite when heated, even after they have been removed from the dryer at the end of the programme.

– items (e.g. mops and floorheads) which have been treated with inflammable cleaning agents or contain residues of acetone, alcohol, benzine, petrol, stain remover, turpentine, wax, wax remover or other chemicals.

– items which have been splashed with hair lacquer, hair spray, nail varnish remover or similar substances.

When washing such heavily soiled items ensure that you use sufficient detergent and select a high temperature. If in doubt, wash the items several times.

▶ To prevent the risk of fire, the following must not be dried in this tumble dryer:

– items which have been cleaned using chemicals (e.g. professional dry-cleaning agents).

– fabrics which contain a large proportion of rubber, foam rubber or rubber-like materials. For example, products made from latex foam rubber, shower caps, waterproof textiles, rubberised articles and items of clothing and pillows with foam rubber filling.

– damaged items which contain padding or fillings (e.g. pillows, jackets). When damaged, the filling can get out with the risk of it igniting in the dryer.

▶ In many programmes, the heating phase is followed by a cooling down phase to ensure that the items are not too hot to handle when you remove them (this also avoids the danger of the laundry self-igniting). The programme is not finished until the cooling down phase has been completed.
Ensure that you always wait until the end of the programme before removing the laundry.

▶ **Warning**: Do not switch the tumble dryer off before the end of the drying programme. If this was done and the laundry was then removed immediately it could give off a great amount of heat.

▶ Fabric conditioner and similar products must be used according to the instructions on the manufacturer's packaging.

▶ The dryer must not be used without the fluff filters in place or if the fluff filters are damaged in any way.

▶ The fluff filters must be cleaned regularly.

▶ The dryer must not be used without the condenser unit in place.

▶ The dryer must not be used without the hygiene filter in place.

▶ The fluff filters must be thoroughly dried after cleaning. Damp or wet filters could cause operational faults.

▶ Do not install the tumble dryer in a room where there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
There is a risk of damage if the condensed water is allowed to freeze in the pump, hoses and / or condensed water container.
The ambient room temperature should be between +2°C and +35°C.

▶ If the water is drained externally through the drain hose instead of being collected in the condensed water container, make sure the drain hose is securely attached if you hang it in a sink or basin to avoid the hose slipping and the water causing damage.

▶ Condensed water is not drinking water.
It can cause health problems in both people and animals.

▶ Always keep the area around the tumble dryer free of dust and fluff. Dust drawn into the tumble dryer can cause blockages in the condenser unit over time.

▶ Do not let anyone sit or lean on the door, as this can cause the tumble dryer to tip up.

▶ Always close the door after use. This way you will avoid the danger of:

– children climbing onto or into the dryer or hiding things in it.

– pets or other small animals climbing into it.

▶ The tumble dryer must not be hosed down.

Accessories

▶ Only use genuine Miele spare parts and accessories with this appliance.
If non-Miele parts are used, guarantee, performance and product liability claims may be invalidated.

⚠ Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Operating the tumble dryer

Control panel

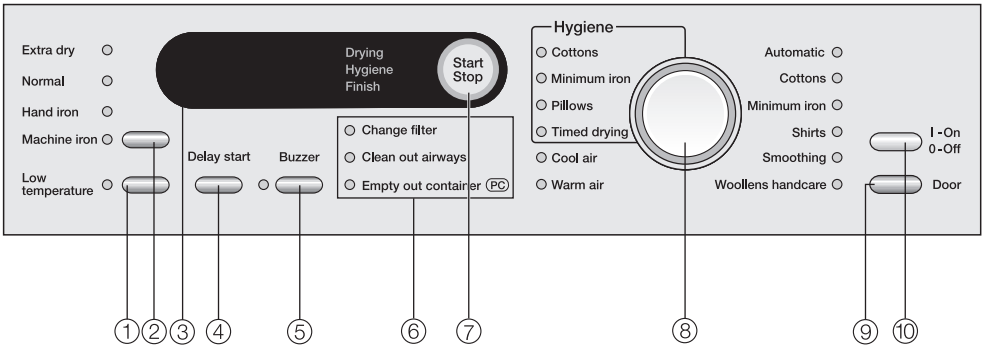

① ***Low temperature*** **button**

Delicate fabrics are dried at a lower temperature.

② **Drying level button**

with indicator lights

③ **Display**

④ ***Delay start*** **button**

This button is used for:
- Selecting the duration of the *Timed drying* programmes
- Delaying the start of a programme

⑤ ***Buzzer*** **button**

An audible tone sounds at the end of the programme.

⑥ **Check lights**

For a description of these lights see: "Problem solving guide" / "After sales service".

⑦ ***Start/Stop*** **button**

For starting the programme selected and cancelling a programme once it has started.
The indicator light flashes while a programme is being selected and then is on constantly when the programme has started.

⑧ **Programme selector**

with indicator lights

⑨ ***Door*** **button**

Pressing this button will open the door even when the dryer is switched off.

⑩ ***On/Off*** **button**

For switching the dryer on and off.

Display

The following are selected via the display:

– Delay start

– Duration of timed drying programmes

– Programmable functions

The display also shows:

– The programme duration

– The programme sequence
Drying
Hygiene
Finish

– Check and fault messages

Programme duration/Estimated time remaining

When a programme is selected, the estimated duration will appear in the display. Please be aware that it is only an estimate!

The following factors all affect the estimated time remaining: residual moisture content after spinning; type of fabric; size of load; room temperature; fluctuations in power supply.

The electronics continually assess conditions in the dryer and adjust the estimated time remaining for a more accurate reading. Because of this, the time displayed can alter during the course of a programme.

In the same way, the Woollens handcare and Smoothing programmes can finish earlier than expected if a certain temperature is reached. This can happen with particularly fine fabrics, very small loads or if items were partly dry beforehand.

Delay start

The delay start time selected will appear in the display.

After the Start/Stop button has been pressed, the delay start time will start counting down.

Once the delay start time has elapsed, the programme will begin and the estimated programme duration will appear in the display.

Programmable functions

The programmable functions can be used to tailor drying programmes to suit your individual requirements. In programming mode, the display will show the function selected.

Drying

The drying air in the drum circulates in a closed system passing lengthwise through the condenser.

The condenser is cooled by a second flow of cool air brought in from outside the dryer. This air passes across the condenser.

The moisture in the drying air condenses in the cooled condenser unit. The condensate is then either collected in the condensed water container or pumped away.

The drying air and the external air used for cooling the condenser unit are kept separate from one another.

Fluff in the drying air which has built up on textiles during the washing process and through wear, is collected by the fluff filters in the door and in the door opening.

Hygiene filter

The hygiene filter filters the air from the room which the dryer takes in to cool the condenser unit. Once filtered this air gets warm. It is then expelled back into the room.

The hygiene filter must be replaced with a new one when the *Change filter* indicator light comes on.

The dryer must not be used without the hygiene filter in place.

Without the hygiene filter in place, the dryer will take in more room air which will in turn cool the condenser unit more and cause a lower drying temperature. A reduction in the drying temperature will mean that micro-organisms are not deactivated. The noise level during drying will also increase.

Please note that the programme durations will be longer if the hygiene filter is not replaced when the indicator light comes on.

Care symbols

Before drying check the drying symbol on the care label. If there are no symbols, dry at your own risk!

⊡ . . . . . Dry at normal temperature
⊡ . . . . . Dry at low temperature
⊠ . . . . . Do not tumble dry

Tips on drying

– Always observe the maximum recommended loads given in the "Programme chart". Never overload the drum.

Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.

– Do not put soaking wet items into the tumble dryer. Spin them thoroughly after washing using the appropriate spin speed.

– For delicates and fabrics with the following care label ⊡ select *Low temperature*.

– Use the *Automatic* programme for drying mixed loads of cottons and minimum iron fabrics.

– Open jackets so that they can dry evenly.

– Woollens and wool blends tend to become matted and shrink if dried in a tumble dryer. They can, however, be partially dried using the *Woollens handcare* programme.

– Down-filled garments have linings which have a tendency to shrink, depending on the quality of the item. They can be partially dried using the *Smoothing* programme.

– Pure linen should only be machine dried if specified as suitable by the manufacturer on the care label, as the surface of the fabric may otherwise become rough. They can be partially dried using the *Smoothing* programme.

– Loopknit garments (e.g. T-shirts and underwear) tend to shrink depending on their quality. Do not over-dry these textiles. Be particularly careful when using the *Hygiene* programmes. When purchasing these garments it is advisable to take their shrinkage properties into account.

– For garments made from very fine weave fibres, such as shirts or blouses, use the *Shirts* programme to avoid creasing. If in doubt, reduce the load or use the *Smoothing* programme.

– Starched laundry can be dried in the tumble dryer. To achieve the usual finish, double the amount of starch should be used.

– New dark coloured garments should be washed and dried separately from light coloured garments to avoid the danger of colours running and discolouring other garments or even plastic components in the machine. Dark coloured fibres can also settle on light coloured garments and vice versa.

Brief instructions

The headings numbered (❶, ❷, ❸ ...) show the operating sequence and can be used as a brief guide to using your dryer.

❶ Sort the laundry

To ensure an even drying result separate the washed laundry and sort it according to:
. . . the drying level required
. . . the type of fibre or weave
. . . size
. . . the moisture content after spinning.

⚠ Make sure that objects e.g. detergent dispensing balls have been removed from the laundry. They could melt, and cause damage to the dryer or the laundry.

– Check seams and stitching to ensure that padding and linings are intact.

– Fasten duvet covers and pillow cases to prevent small items from being trapped inside them.

– Fasten hooks and eyes etc.

– Tie fabric belts and apron strings.

– Sew in or remove underwiring from bras.

❷ Turn on the tumble dryer

■ Switch the dryer on by pressing the *On/Off* button in.

The tumble dryer may be switched on after loading, saving energy as the light will not come on.

❸ Load the tumble dryer

■ Press the *Door* button to open the door.

■ Load the laundry loosely into the drum.

Do not overload the drum. See the "Programme chart" for recommended loads for each programme.
Overloading can cause unnecessary wear and tear to the laundry and give a disappointing drying result.

■ Before closing the door make sure the fluff filter is correctly positioned.

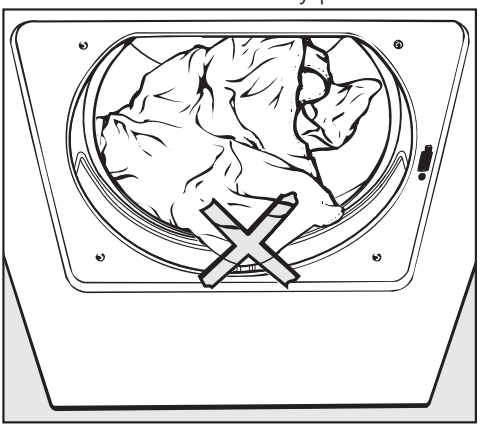

Check the laundry is right inside the drum so that it cannot get trapped or damaged when the door is shut.

■ Shut the door either with a gentle swing, or lean against it and push it shut.

❹ Select a programme

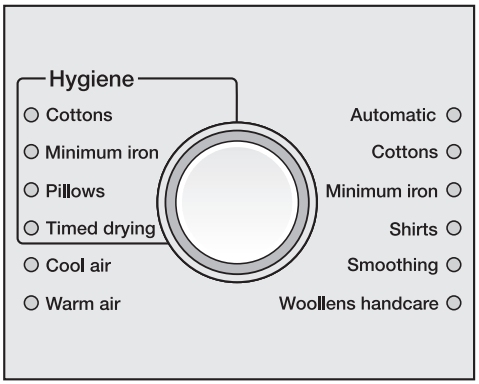

■ Select the programme you want.

The indicator light for the programme selected will light up.
A drying level or additional option indicator light may also light up, and the duration may also be displayed.

***Automatic, Cottons, Minimum iron, Shirts* programmes**

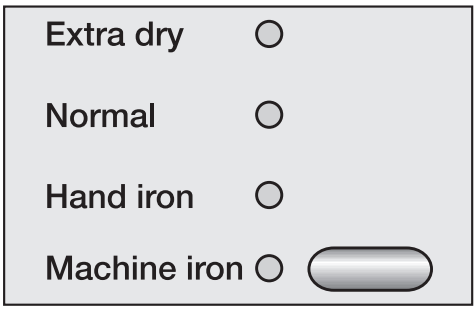

■ Press the Drying level button repeatedly until the indicator light for the drying level you want lights up.

Any of the drying levels can be selected for the *Cottons* programme. A more limited range is available when using other programmes.

Important: Please note that the programme duration shown in the display will vary according to the programme selected (see "Programme duration/Estimated time remaining").

You cannot alter the drying level of the *Woollens handcare* and *Smoothing* programmes.

***Hygiene* programmes**

■ Select one of these programmes for drying garments where high standards of hygiene are required, for example for allergy sufferers.

The *Normal* drying level cannot be changed for *Cottons, Minimum iron or Pillows*.

For *Timed drying*, the duration needs to be selected:

***Timed drying* programmes**

The indicator light for the *Delay start* button will flash when the *Timed drying Hygiene, Cool air* or *Warm air* programmes are selected.

■ After selecting the programme, press the *Delay start* button repeatedly until the required time appears in the display.

The time can be selected in 10-minute steps from:

– *15* minutes to *2:00* hours (*Timed drying Warm air*).

– *20* minutes to *1:00* hours (*Timed drying Cool air*).

– *1:00* to *2:00* hours (*Timed drying Hygiene*).

❺ Select any Extra options / Delay start

■ *Low temperature, buzzer and delay start* are selected by pressing the appropriate button (see "Extra options / Delay start"). *Anti-crease* (see below) is permanently switched on.

Please note: It is not possible to select *Delay start* when using the *Timed drying Hygiene, Warm air* or *Cool air* programmes.

❻ Start the programme

The *Start/Stop* button will flash when a programme is being selected. The flashing indicates that a programme can be started.

■ Press the *Start/Stop* button.

– The *Start/Stop* button will now light up constantly.
– *Drying* will appear in the display and the time remaining will start counting down.
– If you have selected a Hygiene programme the word *Hygiene* will appear in the display a short while into the drying process.

Before the end of a programme

There is a cooling down phase at the end of the drying sequence. The programme is finished at the end of this cooling down phase.
There is no cooling down phase at the end of the Woollens handcare or Smoothing programmes.

❼ Remove the laundry when the programme has finished

0 and *Finish* will appear in the display to indicate that the programme has finished. The buzzer (if selected) will sound at intervals.

The drum will continue to rotate at intervals for up to an hour to prevent laundry creasing, if you do not wish to remove it immediately (anti-crease). There is no anti-crease phase at the end of the *Woollens handcare* programme.

■ Press the *Door* button.

■ Open the door.

Tip for allergy sufferers:
You can use a vacuum cleaner to remove fluff from the fluff filters in the door opening before you remove the laundry from the dryer. This will avoid your skin or the laundry coming in contact with the fluff.

■ Remove the laundry.

Check that all items have been removed from the drum. If items are left in the dryer, they could be damaged by overdrying when the dryer is next used.

If the dryer is switched on at the mains and the door is opened, the drum lighting will come on. It will go out a few minutes later to save energy.

■ Switch the dryer off by pressing the *I-On/0-Off* button.

■ Clean the fluff filters.

■ Close the door.

■ Empty the condensed water container (unless the dryer has been connected for external drainage).

Low temperature

For all delicate or minimum iron fabrics with the ⊡ symbol on the care label (e.g. acrylic garments).

– The programme duration is longer.

– On some programmes *Low temperature* is a standard part of the programme and so cannot be deselected.

Buzzer

A buzzer sounds (at intervals for a maximum of 1 hr) to let you know the programme has finished.

The buzzer will still sound if there is a fault, even if it has been switched off.

Delay start

The start of a programme can be delayed by 30 minutes up to 24 hours to allow you to take advantage of economy electricity at night, for example.

After selecting a programme:

■ Press the *Delay start* button repeatedly until the required delay period shows in the display.

– The *Delay start* indicator light will flash.

– Times of:
up to *10h* are selected in 30 minute steps
more than *10h* in 1 hour steps

– If you keep the *Delay start* button pressed in, the time will continue to increase up to *24h*.

To begin delay start

■ Press the *Start/Stop* button.

– The *Delay start* indicator light will light up constantly.

The delay start time counts down towards the start of the programme as follows:

– more than *10h* by the hour

– less than *10h* in minutes

The drum will turn briefly every hour to help prevent creasing.

While the delay start time is counting down, you can still add laundry to the drum:

■ Switch the dryer off.

■ Open the door and add the laundry.

■ Close the door and switch the dryer back on again.

To cancel/alter delay start

■ Press the *Start/Stop* button.

This cancels delay start.

■ To alter the delay start time, press the *Delay start* button repeatedly until the required delay period shows in the display.

■ Press the *Start/Stop* button.

The altered delay start time will start counting down from the beginning again.

Programme chart

Hygiene programmes	
In the *Hygiene* programmes the temperature is held constant for a longer period of time to deactivate micro-organisms, e.g. bacteria or house dustmites, and also to reduce the number of allergens in the laundry. If *Hygiene* appears in the display, this indicates that the hygienic drying process is running. The programme should not be interrupted, as this would prevent the micro-organisms from being deactivated.	
Cottons	**Max. load: 6 kg***
Fabric type	Cottons and linen fabrics which are in direct contact with the skin, e.g. underwear, nappies, towelling, bed linen, pillow and mattress covers.
Note	Only for drying fabrics which can withstand higher temperatures and which have the ⊙ symbol on the care label.
Minimum iron	**Max. load: 3 kg***
Fabric type	Minimum iron items made of synthetic or mixed fibre, e.g. skirts, shirts and blouses.
Note	Only for drying fabrics which can withstand higher temperatures and which have the ⊙ symbol on the care label.
Pillows	**1 pillow (up to max. 80 x 80 cm) or 2 pillows (up to max. 40 x 80 cm)**
Fabric type	– Pillows with feather, down or synthetic fillings. – Large items, e.g. bed covers
Notes	– For drying or airing items, e.g. pillows with the ⊙ or ⊙ symbol on the care label. – If an item still feels damp after being dried, you can use this programme several times until it feels dry .
Timed drying	**Max. load: Depends on fabric type**
Fabric type	– 6 kg* of items made of cotton or linen fabric. – 3 kg* of minimum iron items made of synthetic or mixed fibre.
Note	– For airing individual items of laundry which are already dry or for deactivating lice, dustmites and micro-organisms in washable materials which are suitable for drying in a tumble dryer, e.g. stuffed toys, and which have the ⊙ symbol on the care label.

* Weight of dry laundry

Cool air	**Max. load: 6 kg***
Fabric type	– Any item which only needs airing.
Warm air	**Max. load: 6 kg***
Fabric type	– Multi-layered fabrics whose layers have different drying characteristics, e.g. jackets, pillows. – For drying individual items, e.g. bath towels, bathing costumes, tea-towels and small loads.
Note	Do not select the longest drying time to start with. Check the items as you are drying them to find the optimum time.
Tip	You can use the *Warm air* programme to help remove odours from cotton clothing which has been worn but it still clean (select a duration of between 1/2 and 1 hour). Items must be suitable for drying in a tumble dryer. Dampen the garments a little beforehand or add a fabric conditioner sheet. The Warm air programme will not be as effective at removing odours from any parts of the garments which are made of synthetic fibres.
Low temperature	Also select the Low temperature option for delicate fabrics with the ⊡ symbol on the care label.

* Weight of dry laundry

Programme chart

Automatic	**Max. load: 3.5 kg***
Normal, Hand iron	
Fabric type	Mixed loads of garments suitable for the *Cottons* and *Minimum iron* programmes. Sort according to colour.
Cottons	**Max. load: 6 kg***
Extra dry, Normal**	
Fabric type	Single and multi-layered cotton fabrics such as towelling, jerseywear, T-shirts, underwear.
Notes	– Select *Extra dry* for multi-layered and very thick fabrics. – Do not use *Extra dry* for jersey fabrics (e.g. T-shirts, underwear, baby clothes), as they have a tendency to shrink.
Low temperature	Select the Low temperature option for delicate fabrics with the ⊡ symbol on the care label.
Hand iron, Machine iron**	
Fabric type	Cottons or linen fabrics, e.g.: table linen, bed linen, starched laundry.
Note	– To prevent laundry from drying out it should be rolled up until you are ready for ironing.
Low temperature	Select the Low temperature option for delicate fabrics with the ⊡ symbol on the care label.
Minimum iron	**Max. load: 3 kg***
Normal, Hand iron**	
Fabric type	Minimum iron items made of cotton, synthetic or mixed fibre, e.g.: shirts, blouses, skirts and table cloths.
Notes	– Select *Hand iron* for delicate fabrics and to reduce creasing even more, reduce the load to 1.5 kg*. – With the *Hand iron* drying level, items are dried with very little creasing, depending on fabric type and amount of laundry.
Low temperature	Select the Low temperature option for delicate fabrics with the ⊡ symbol on the care label.

* Weight of dry laundry

** Note for test institutes:
Use this programme without selecting Low temperature for testing according to Standard EN 61121.

Shirts	**Max. load: 2 kg***
Normal, Hand iron	
Fabric type	Shirts and blouses.
Low temperature	Select the Low temperature option for delicate fabrics with the ⊙ symbol on the care label.
Smoothing	**Max. load: 3 kg***
Fabric type	– Cotton and linen fabrics. – Minimum iron mixed fibre, cotton or synthetic items, e.g.: trousers, jackets, shirts.
Notes	– Smooths out creasing caused during the spin cycle in the washing machine. – Fabrics are not completely dried in this programme. Remove garments as soon as the programme has finished and leave to finish drying at room temperature.
Low temperature	Low temperature cannot be deselected.
Woollens handcare	**Max. load: 2 kg***
Fabric type	Woollen fabrics
Notes	– This programme only fluffs up woollen garments. – Fabrics are not completely dried in this programme. Remove garments as soon as the programme has finished and leave to finish drying at room temperature.
Low temperature	Low temperature cannot be deselected.

* Weight of dry laundry

Once a programme has started

- changing the programme

You cannot change to another programme once a programme has started (this prevents unintentional alterations).

You will need to cancel the current programme before you can select a new one.

- cancelling the programme and then selecting a different programme

- Press the *Start/Stop* button.

  The items will be cooled down, depending on the temperature reached and how long they have been dried for.

  If you press the *Start/Stop* button again during the cooling down phase, *Finish* will light up in the display.
- Press the *Door* button.
- Close the door.
- Select another programme and start it.

- cancelling the programme and then removing the laundry

- Proceed as described in "Adding or removing laundry after a programme has started" below.
- Switch the dryer off after closing the door.

Altering Delay start

- See "Delay start".

Adding or removing laundry after a programme has started

- Press the *Door* button.
- Open the door.

⚠ Danger of burning:
Do not touch the back of the drum when adding or removing items. The drum and the items can get very hot.

- Add or remove items as required.
- Close the door.
- Press the *Start/Stop* button.

Time remaining

The time left shown in the display may now vary from the actual drying time.

The system lock prevents the dryer being used without your knowledge.

It can be activated if wished.

The dryer's electronics are then locked. The dryer can still be switched on but a programme cannot be started.

– If an attempt is made to start a programme, the indicator light for the *Low temperature* button will come on and a key symbol 0-o will appear in the display.

The door is not locked and can be opened at any time.

To activate the lock

Before you begin, first ensure that:

– The tumble dryer is switched off.

– The door is closed.

❶ Press the *Low temperature* button and keep it pressed in whilst carrying out steps ❷ to ❺.

❷ Press the I/O button in.

The *Automatic* indicator light will come on.

❸ Slowly turn the programme selector three positions stage by stage in a clockwise direction.
Each of the three programme indicator lights must come on one after the other.

❹ Now slowly turn the programme selector six positions stage by stage in an anti-clockwise direction.
Each of the six programme indicator lights must come on one after the other.

The indicator light for the *Low temperature* button will flash and a key symbol 0-o will appear in the display.

❺ Release the *Low temperature* button.

The electronics have now been locked.

■ Switch the dryer off.

To deactivate the lock

Before you begin, first ensure that:

– The tumble dryer is switched off.

– The door is closed.

■ The procedure is the same as for activating the lock. Carry out steps ❶ to ❺ as described previously.

At step ❺ the indicator light for the *Low temperature* button will stop flashing and the key symbol 0-o will go out.

The electronics are no longer locked.

Emptying the condensed water container

The condensed water will be collected in the condensed water container unless the appliance has been fitted with a drain hose (see "Installation").

Empty the condensed water container after every drying programme.

The *Empty out container* indicator light will come on if the maximum level of the condensed water container is reached.

The indicator light will go out when the door is opened and closed again.

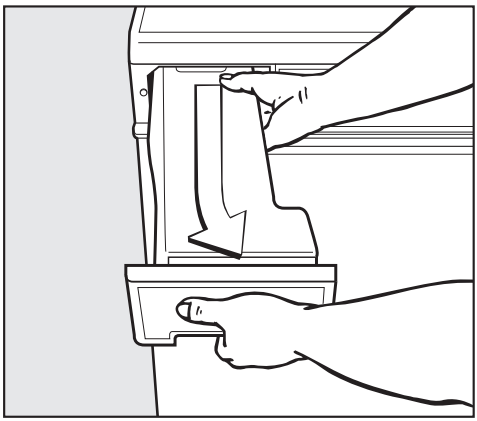

- Holding the container firmly in both hands, as shown, pull it out slightly towards the right-hand side.
- Hold the container with both hands and carry it in a horizontal position.

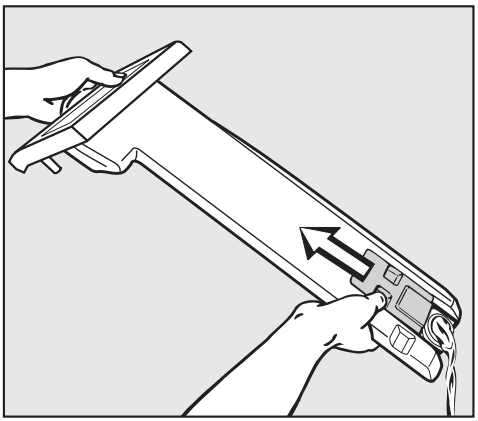

- Open the shutter and empty out the water.
- To replace the container, hold it at a slight angle (as when removing it) and push it in gently until you feel it click into position.

⚠ Condensed water should not be consumed. It could lead to health problems for people and animals.

Condensed water can be put to household use (e.g. in a steam iron or humidifier). To ensure that any residual particles of fluff in the condensed water are removed before use, pass it through a fine sieve or paper filter first.

Cleaning the fluff filters

Fluff from items being dried is collected by the fluff filters in the door and the door opening. Clean the filters after **each** drying programme. The filters should also be inspected whenever the "Clean out airways" indicator light comes on.

Useful tip: You can also use a vacuum cleaner* to remove the fluff. This could be helpful for allergy sufferers where it is important to avoid the skin coming into contact with the fluff.

* use the tool supplied with the dryer.

Cleaning them whilst dry

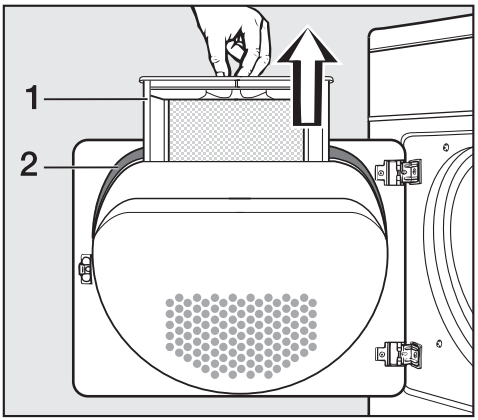

- Open the door and pull the fluff filter (1) out of the door as illustrated.
- Also clean the door seal (2) with a damp cloth.

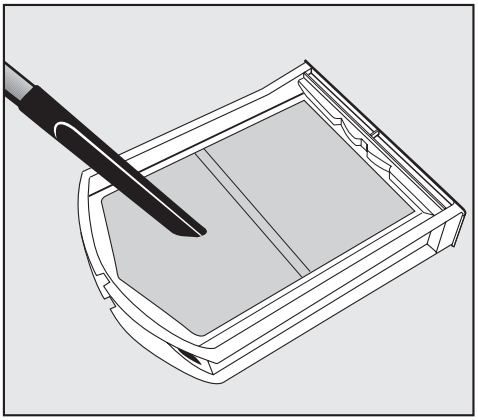

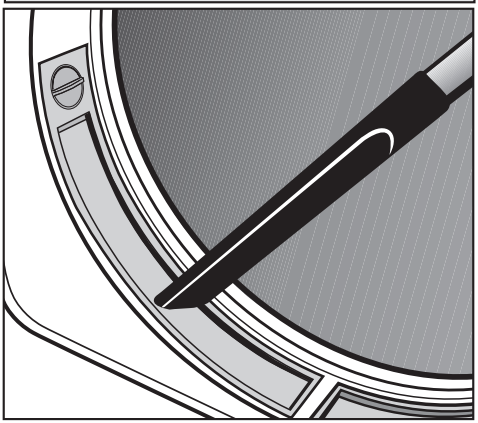

- Vacuum the surface of the fluff filter.

If a vacuum cleaner is not available, you can remove the fluff with your fingers.

- Vacuum up any fluff from the hollow part of the door opening. You could also use a cleaning brush which is available as an optional extra from your Miele dealer or the Miele Spare Parts Department.
- Once clean, push the filter back into the door holder until it clicks into position. Ensure it is facing the correct way.
- Close the door.

Cleaning them with water

If there is a great deal of compacted fluff on any of the filters, they can be removed and cleaned under hot running water.

- Open the door and pull the fluff filter out of the door as described previously.

The two filters in the door opening can also be removed if you need to clean them with water.

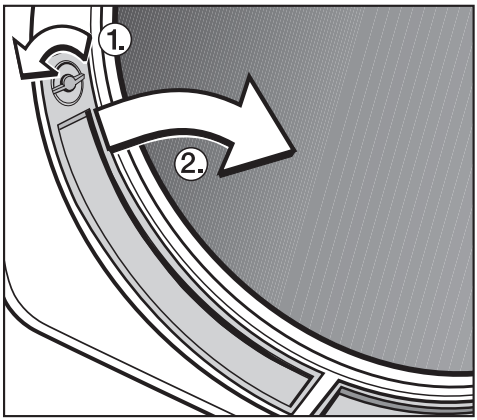

- Turn dial ① and pull the filter by the dial out of the door opening as shown ②. Do the same on the other side.
- Rinse all the filters under hot, running water.
- Then shake the filters until no more water droplets are visible.
- Dry the filters thoroughly with care.
- Clean the area underneath these filters, e.g. with a vacuum cleaner.

⚠ Do not replace them if they are damp or wet. Damp or wet filters could cause operational faults.

- Push the large filter back into the door holder until it clicks into position. Ensure it is facing the correct way.
- Replace the filters in the door opening by first inserting them at the bottom and then pressing them into place at the top.
- Lock both dials.

Cleaning the tumble dryer

Disconnect the tumble dryer from the mains electricity supply.

Miele branded cleaning and conditioning products are available to order via the internet on www.miele-shop.com.

- Clean the housing and control panel with a slightly damp cloth and a mild detergent or soapy water.
- The drum and other stainless steel parts can be cleaned with a suitable stainless steel cleaner following the manufacturer's instructions.

Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic sufaces and other parts. The tumble dryer must never be hosed down.

- Dry all parts with a soft cloth.

Hygiene filter

Replacing the hygiene filter

The hygiene filter in the dryer filters out dirt particles from the room air which is drawn in to cool the condenser unit. This means that when the air which has been used to cool the condenser unit is expelled back into the room, it does not add any dirt particles to the air in the room.

⚠ To ensure that the dryer continues to function correctly the hygiene filter must be replaced with a **new** one when necessary.

- Use the lever to open the panel.

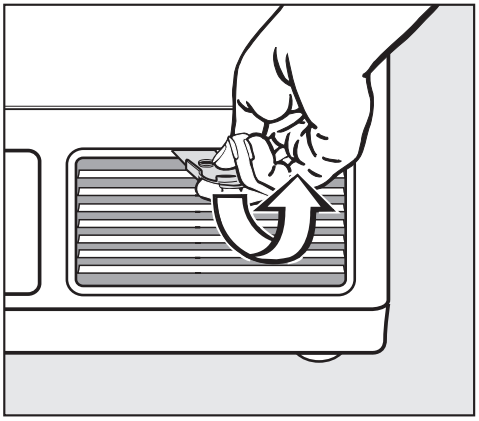

- Now remove the panel by pulling it diagonally upwards.

The replaceable hygiene filter is located in a removable holder on the back of the panel.

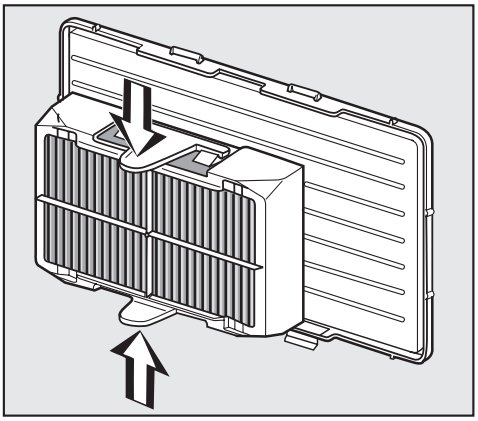

- Press the lugs gently together to release the holder from the panel.
- Dispose of the used hygiene filter with your normal household waste.
- Refit the holder, together with the new filter, onto the back of the panel.
- Replace the panel and press the upper edge until it clicks into position.

Resetting the filter counter after fitting a new filter

The *Change filter* indicator comes on to tell you that it is time, under normal conditions, to replace the hygiene filter with a new one.
However, where excessive dust has collected it may be necessary to replace the hygiene filter more frequently than waiting until the indicator lights up.

You must reset the filter counter back to 0 when you replace the filter. This allows the filter counter to start counting the time to the next replacement.

Carry out the following procedure each time you replace the hygiene filter (even if the indicator light has not come on):

- Switch the dryer on.
- Press the *Low temperature* and *Buzzer* buttons at the same time and hold them in for 4 seconds.

The counter has been reset once the *Change filter* indicator light has gone out.

Cleaning the condenser unit

Detergent residue, hair and fine fluff from the dryer can get through the fluff filters and block the condenser unit. Dust from the room in which the dryer is installed can also get into the condenser unit and cause a blockage.

Check the condenser unit at least once a year. Always check it if the *Clean out airways* indicator light comes on. Clean it if necessary.

Removing the condenser unit

- Open the service panel. Hold the panel securely when doing this.

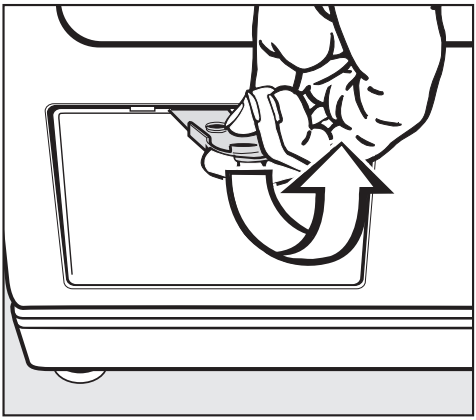

- Now remove the panel by pulling it diagonally upwards and place it to one side.

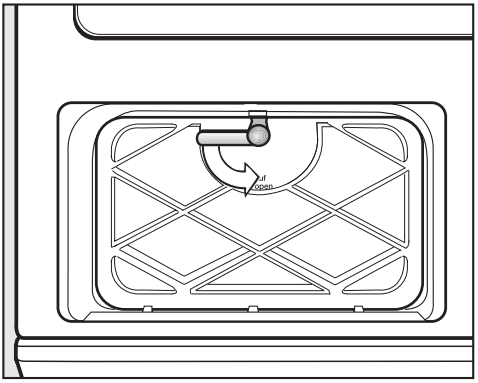

- Turn the lever on the inner cover downwards to the vertical position.
- Tilt the cover forwards.
- Remove it by pulling it diagonally upwards.

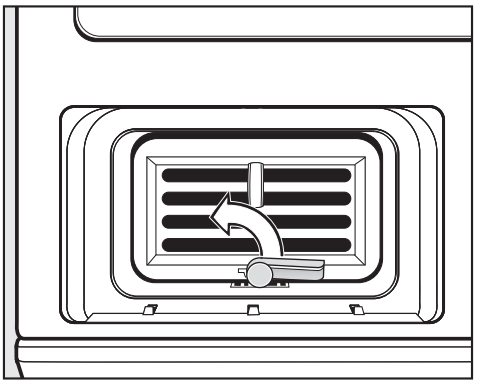

- Turn the lever on the condenser unit upwards to the vertical position so that the hook on the lever is no longer in the groove at the bottom of the condenser unit housing.

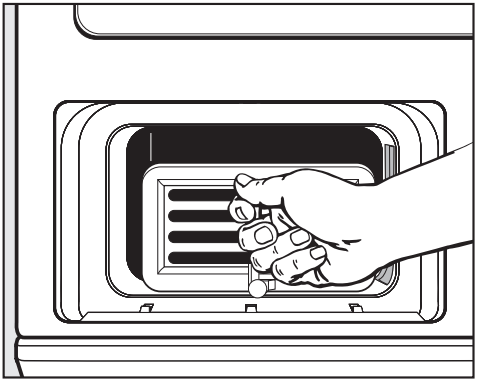

- Pull the condenser unit out of its housing by the handle.

Checking the condenser unit

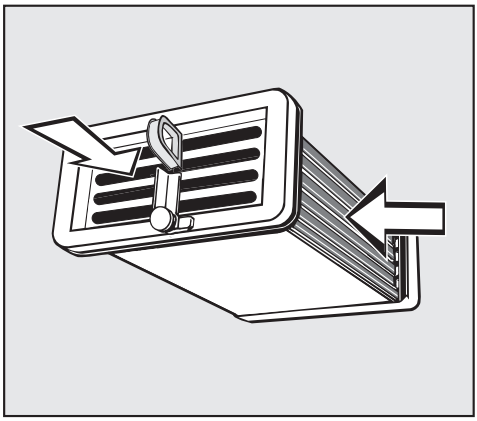

- Hold the condenser unit up to the light **as shown**.
- Check to see if there is any fluff inside it.
  The arrows in the illustration above indicate where to look.

If you cannot see any fluff:

- Replace the condenser unit (see following page).

If you can see some fluff:

- Clean the condenser unit as described below.

Cleaning the condenser unit

- **When rinsing the condenser unit, make sure you position it as shown in the next two illustrations.**

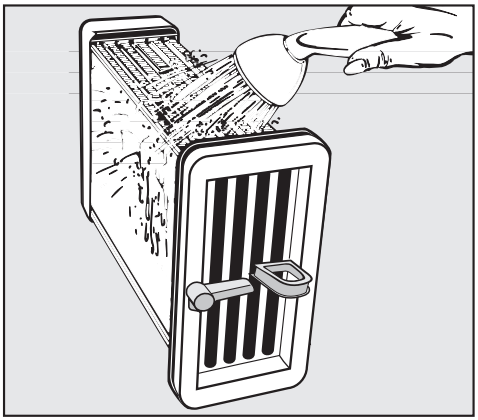

- Use a shower head or similar to rinse the unit out **as shown**.

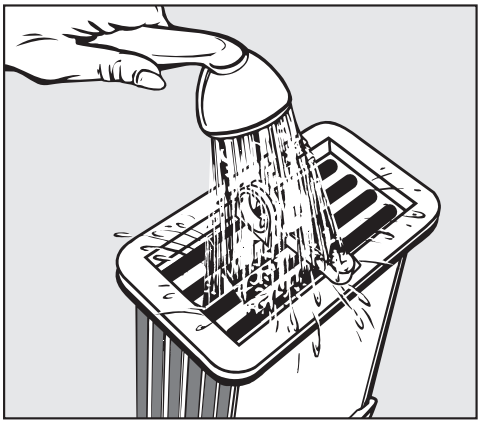

- Then flush the unit through from the front.
- Check the condenser unit again for any visible fluff and if necessary flush it through again until it has all gone.
- Also make sure the rubber seals are clean.
  The rubber seals must not be removed and must be free of kinks.

Checking and cleaning the condenser unit housing

- Remove any soiling still visible inside the housing unit by hand using a damp cloth. Do not try and access areas you cannot reach by hand!

Replacing the condenser unit

- **With the handle facing upwards**, push the condenser unit back into position in its housing.
- Turn the lever down to the horizontal position, making sure that the hook on the lever clicks into the groove.

When replacing the inner cover after cleaning, ensure that the rubber seal fits correctly into the groove.

- Replace the inner cover making sure the hooks locate correctly. Hold it at an angle and push it gently downwards.
- Then turn the lever upwards into the horizontal position to lock the cover.
- Replace the service panel and press the upper edge until it clicks into position.

⚠ It is important to ensure that both the condenser unit and the cover are correctly positioned and locked, otherwise water may leak from the dryer.

With the help of the following notes, minor faults in the performance of the appliance, some of which may result from incorrect operation, can be put right without contacting the Service Department.

Repair work to electrical appliances should only be carried out by a suitably qualified person in strict accordance with current local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Check and fault messages

Problem	Possible cause	Remedy
The programme stops and 0 and *Finish* appear in the display. **The buzzer sounds.**	This is not a fault. The electronic unit has recognised that there is no laundry in the drum and cancelled the programme. Drying individual garments or items which are already dry can also cause the programme to be cancelled.	– Use the Warm air programme (timed drying) to dry individual items. **To delete the fault message:** – Open and close the door.
0-o appears in the display. **The *Low temperature* indicator lamp flashes.**	The electronic system lock is activated.	You will need to deactivate the system lock before the dryer can be used (see "Electronic system lock").
The programme stops and *Hygiene* or *Finish* flashes in the display. **The buzzer sounds.**	No obvious cause.	– Switch the dryer off and then on again. – Then start the programme again. If the programme stops and a fault message appears again there is a fault. Contact the Miele Service Department.

Problem solving guide

Problem	Possible cause	Remedy
The *Clean out airways* light comes on.	This indicator light comes on to warn you that the dryer is not working efficiently. Possible cause: The fluff filters are clogged with fluff or with detergent residues.	– Cleaning the filters is usually all that is required. However, if the light does not go out after you have cleaned the filters, then also check all the possible causes described under "The drying process goes on too long or even switches off". **To switch the light off:** – Open and close the door.
		The *Clean out airways* indicator light can be deactivated (see "Programmable functions").
The programme stops and the *Clean out airways* indicator light comes on. **The buzzer sounds.**	See above for possible causes and their remedies.	**To switch the light off:** – Open and close the door. – If the indicator light appears again, contact the Miele Service Dept.
The *Empty out container* indicator light comes on. **The buzzer sounds.**	The condensed water container is full or there is kink in the drain hose.	– Empty out the condensed water container. – Check the drain hose. **To switch the light off:** – Open and close the door.

Problem	Possible cause	Remedy
The *Change filter* indicator light has come on.	A filter counter registers the number of hours the hygiene filter has been operating for. Under normal conditions, it is time to replace the hygiene filter when the ***Change filter*** indicator light comes on.	Please see "Cleaning and care, Hygiene filter" for details.
The word *Hygiene* does not start flashing as soon as a Hygiene programme starts.	This is not a fault.	*Hygiene* will not start flashing until the hygiene drying process has been running at a particular temperature for a longer period of time.
The *Start/Stop* button is flashing slowly and the display is dark.	The dryer is in Standby mode. This is quite normal and not indicative of any fault.	See "Programmable functions".

Other problems

Problem	Possible cause	Remedy
The drying process goes on too long or even switches off. **In some circumstances, the Clean out airways indicator light still comes on, even though the filters are clean.**	**Please check all the possible causes and switch the dryer off and then back on again.**	
	Ventilation to and from the dryer may be insufficient (e.g because it is installed in a small room). This has caused the temperature in the room to rise sharply.	Open a door or window while the dryer is in operation for increased air flow.
	The opening in the hygiene filter panel is blocked.	– Remove any objects that are blocking the vents.
	It is possible for the hygiene filter to be heavily soiled without the warning message coming on. Please see "Cleaning and care, Hygiene filter" for details.	– Take out the old filter and replace it with a new one. – Always keep the area around the dryer free of dust and fluff.
	The fluff filters are clogged up with fluff or were still wet when they were replaced.	– Remove any fluff. – The fluff filters must be completely dry.
	Detergent residues, hair and fine fibres can block up the condenser unit.	Check the condenser unit from time to time and clean it if necessary.
	The laundry has not been spun sufficiently.	Make sure that your laundry is thoroughly spun at the appropriate spin speed.
	The tumble dryer has been overloaded.	Do not exceed the maximum load for the programme selected.
	Metallic components, e.g. zips have prevented the dryer from registering the correct moisture level in the laundry.	– Open zips next time. If the problem occurs again, dry garments with long zips using the Warm air programme (timed drying).

Problem	Possible cause	Remedy
The laundry is not sufficiently dry.	The load consisted of different fabrics or the item was very large.	– Finish drying using the Warm air programme. – Select a more suitable drying programme next time (see "Programme chart"). – Use the *Pillows hygiene* programme for drying very large items such as bedding.
Pillows still feel damp after being dried.	– The pillow is very large. – The tumble dryer has been overloaded.	– See the appropriate section in the "Programme chart". – Dry pillows repeatedly using the *Pillows hygiene* programme, until dry, or leave to dry in the fresh air.
Feather filled pillows smell after drying.	Feathers are a natural product and this is quite normal.	The smell will dissipate after sufficient airing.

Problem solving guide

Problem	Possible cause	Remedy
Water leaks from the dryer after the condenser unit has been cleaned.	– The inner cover of the condenser unit has not been locked properly and/or the condenser unit has not been positioned correctly. – Fluff has collected in the condenser unit housing.	– Ensure that the condenser unit is positioned correctly and lock the inner cover. – Check the rubber seals. – Use a cloth to remove any visible fluff from the inside of the condenser unit housing.
Items made of synthetic fibres are charged with static electricity after drying.	Synthetic fibres tend to attract static charge.	Static charge can be reduced by adding a fabric conditioner to the final rinse in the washing programme or a fabric conditioner sheet to the load when drying.
There is a build-up of fluff.	Fluff is principally the result of friction when garments are being worn and washed. Machine drying does not affect the lifetime of fabric.	Fluff is collected by the fluff filters and can be easily removed (see "Cleaning and Care").

Problem	Possible cause	Remedy
The tumble dryer fails to start when switched on.	No obvious cause.	– Is the dryer switched on? – Is the plug correctly inserted into the socket and switched on? – Is the door closed properly? – Has the fuse or circuit breaker tripped?
Power cut.	A programme which was running previously will continue automatically when power is restored to the tumble dryer as long as the Cooling down phase had not been reached.	
The interior drum lighting does not come on.	The lighting switches off automatically (to save energy).	Switch the dryer off and then on again.
	The lamp needs changing.	Change the lamp as described at the end of this section.

Changing the lamp

Disconnect the tumble dryer from the mains electricity supply.

- Open the door.

You will find the interior lamp cover at the top of the drum aperture.

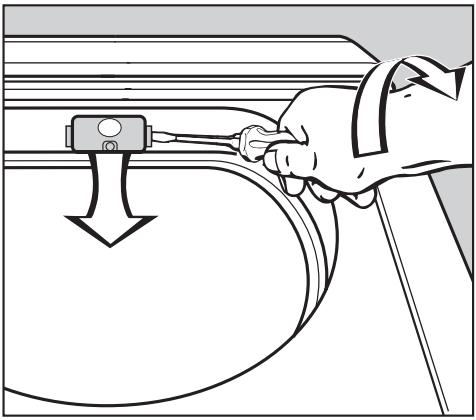

- Insert a suitable tool, such as a wide bladed screwdriver, under the side edge of the lamp cover as illustrated.
- Apply a little pressure and whilst doing so turn your wrist in the direction of the arrow to open the cover.

The cover will open downwards.

The temperature resistant lamp should only be ordered from your Miele Dealer or the Miele Spare Parts Department.

The lamp specification and maximum wattage is stated on the data plate and on the lamp cover.

- Replace the lamp.
- To close the cover push it upwards and press it on the left and right until you hear it click into position.

⚠ Ensure that it is fitted into position securely, as any moisture could cause a short circuit.

Repairs

In the event of any faults which you cannot remedy yourself, please contact

– your Miele dealer or

– the Miele Service Department (see back cover for contact details).

When contacting your dealer or the Service Department, please quote the model and serial number of your appliance, both of which are shown on the data plate situated on the right hand side below the drum aperture.

N.B. A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

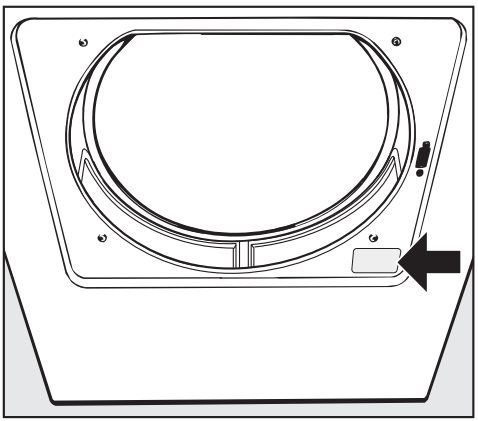

Future updates (PC)

The indicator or check light marked **PC** on the fascia panel is the interface used by the Miele service technicians during service work for testing purposes and for updating the appliance's programme data.

Appliance guarantee

Please see the guarantee card supplied with your appliance.

Optional accessories

Optional accessories for this dryer are available from your Miele Dealer, the Miele Spare Parts Department or via the internet at www.miele-shop.com.

Please note that telephone calls may be monitored and recorded for training purposes.

Front view

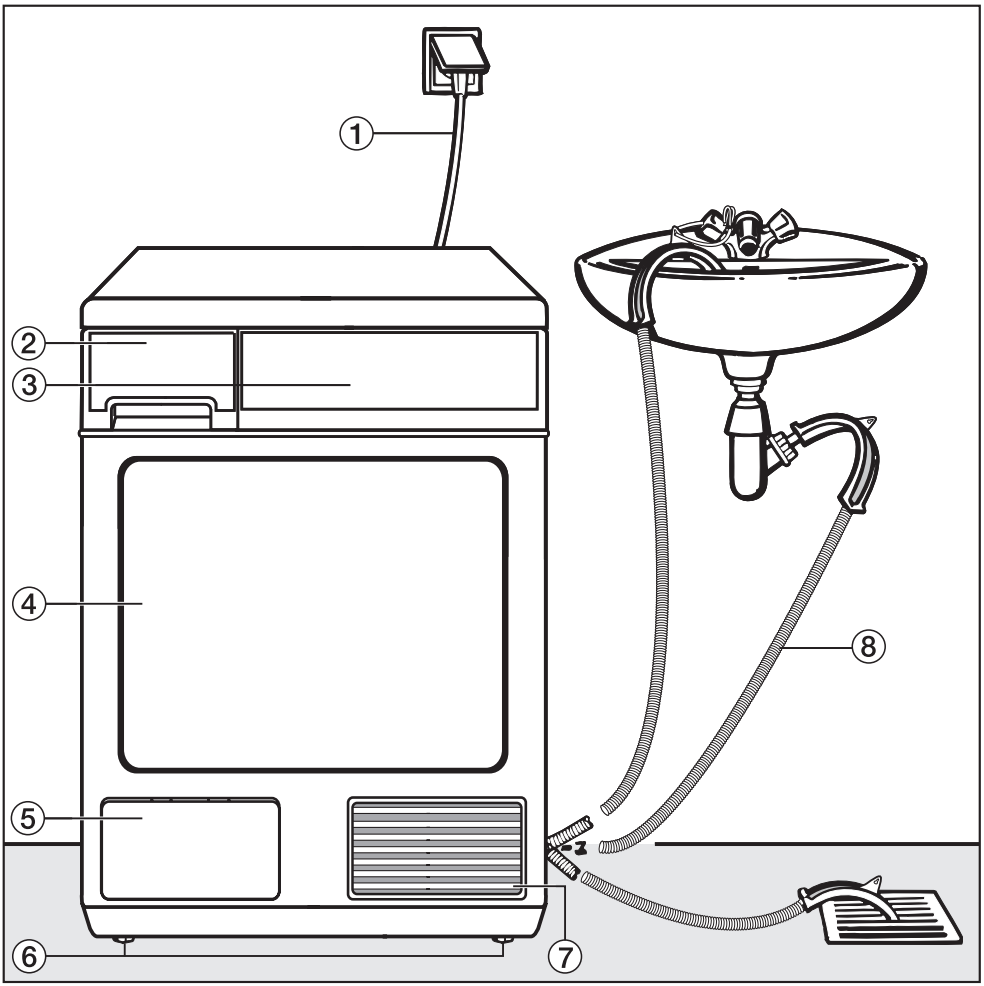

① Mains connection cable

② Condensed water container

③ Control panel

④ Door

⑤ Service panel for condenser unit

⑥ Four height adjustable screw feet

⑦ Hygiene filter panel (the room air for cooling the condenser unit is drawn in here)

⑧ External drainage options (e.g. via wash basin, wash basin drain outlet or gully)

Installation site

⚠ Make sure the dryer door can be opened without hindrance after installation.

Transporting the dryer to its installation site

When moving the dryer you can hold it by the lid where it protrudes to the rear of the dryer. To manoeuvre the dryer out of its packing case to its installation site you will also need to hold it by the front feet. Do not hold the dryer by the door.

Building under a continuous worktop / in a row of kitchen units

⚠ It is very important to avoid a build up of heat.
The warm air which is expelled from the rear of the dryer must be able to dissipate. Otherwise drying times will be increased unnecessarily.

You can ensure that the warm air can dissipate by:

– Adjusting the screw feet so that there is a gap of at least 20 mm between the floor and the bottom of the dryer.

– Creating a gap for the dryer in the kitchen furniture plinth facing.

– Creating ventilation gaps in the kitchen unit.

⚠ The dryer should not be installed next to a refrigerator or freezer. The warm air expelled from the rear of the dryer would increase the temperature around the refrigerator's/freezer's heat exchanger causing the compressor to run continuously.
If it is not possible to install the dryer anywhere else, then the refrigerator/freezer must be sealed off from the dryer.

⚠ A **building under kit*** with a coverplate to replace the appliance lid is required. It must be fitted by a suitably qualified person to ensure electrical safety.

N.B. If you wish to push your dryer under a worktop and there is space to do this **without removing the lid**, a building under kit is not necessary. Otherwise the building under kit is essential.

The building-under kit is supplied with its own installation instructions.

– N.B. When built under drying times may be longer.

– The electrical socket must be located in an accessible position near the machine.

With niche heights of:

– 830-840 mm, longer screw feet* are required.

– 870/885 - 915/930 mm, one or two raising kits* are required.

* Accessory available to order

Replacing the lid

If the lid has been removed in order to fit a coverplate, ensure that, if the lid is ever replaced, it fits securely into the rear holders. Otherwise, it is not properly secure for transport.

Levelling the dryer

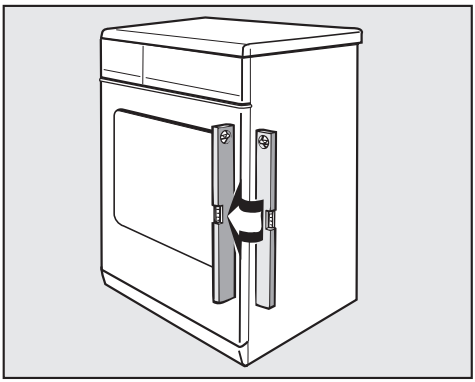

The dryer must be perfectly level to ensure safe and proper operation.

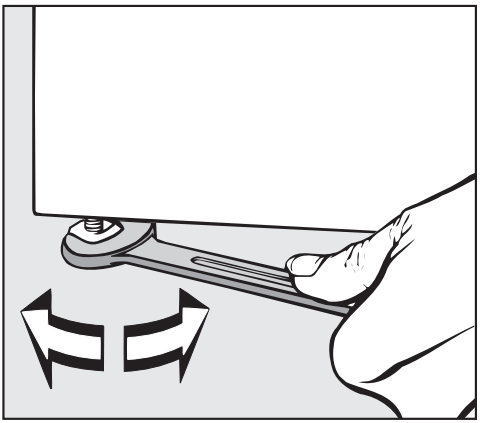

- The screw feet can be adjusted to compensate for any unevenness in the floor.

⚠ At the front of the dryer: Room air to cool the condenser unit is taken in through the opening in the hygiene filter panel. This opening must not be blocked or covered over as this would cause a fault.

Room in which the dryer is located

Air taken in for use in the drying process will be warm when it is expelled from the rear of the dryer. This expelled air heats up the air in the room. It is therefore very important to ensure that the room is adequately ventilated, particularly if the dryer is located in a small room. Otherwise running times and energy consumption could be increased.

Washer-dryer stack

The tumble dryer can also be combined with a Miele washing machine in a washer-dryer stack. The appropriate "WTV" stacking kit (available to order) is required.

⚠ Stacking kits must only be installed by a suitably qualified fitter.

Before moving the dryer again (e.g. when moving house)

After each use a small quantity of condensed water will collect in the area around the pump. This water can run out if the dryer is tipped up when it is being moved. It is a good idea to run the *Cool air* programme for approximately 1 minute before moving the dryer. Any remaining condensed water will then be fed into the condensed water container or out through the drain hose.

External condensed water outlet

When drying is in progress, condensed water is pumped into the condensed water container through the drain hose at the back of the dryer. The condensed water can also be drained off directly if the dryer is installed near a sink, drain outlet etc. so that the condensed water container does not have to be emptied.

The drain hose (approx. 2 m long) is stored in the dryer. It must be pulled out of the dryer to its full extent if condensed water is to be drained externally. Maximum delivery head: 1.5 m.

If it is not long enough, an extension hose is available as an optional accessory through your dealer or from the Miele Spare Parts Dept.

Setting up the drain hose

From the back of the dryer at the top:

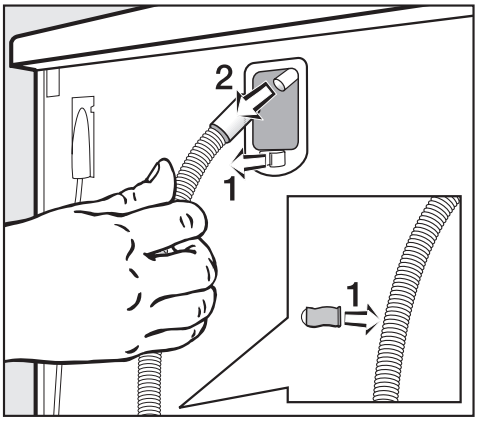

- Unclip the drain hose from clip **(1)**.
- Then pull it off holder **(2)**.

From the back of the dryer at the bottom:

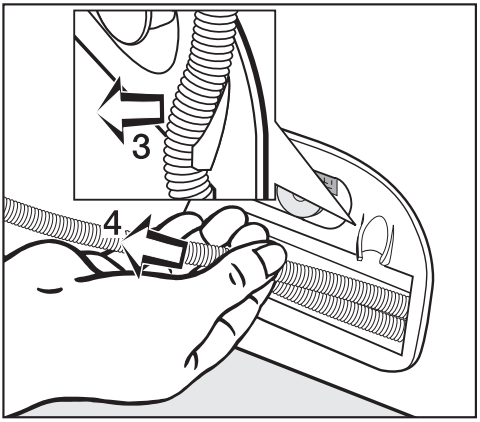

- Unclip the drain hose from clip **(3)**.
- Then pull the drain hose **completely out of the dryer towards the left (4)** (See illustration). Important:

⚠ Do not let the drain hose become kinked, as this could damage it.

⚠ If you want to drain the water off into a sink you will need to secure the hose carefully, e.g. by tying it to a tap to make sure it cannot slip during use. Otherwise there is a risk of overflowing water which could cause damage.

Use the bow-shaped guide to prevent the drain hose from becoming kinked (see "Front view" illustration).

Connection to a sink drain outlet

The drain hose can be connected directly to a sink drain outlet.

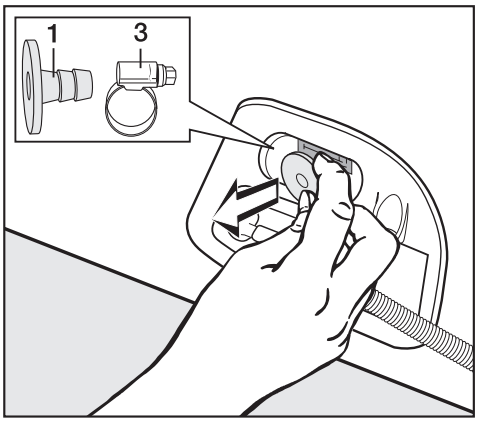

- Remove the following from the back of the dryer at the bottom:
  Adapter **1** and hose clip **3** behind it.

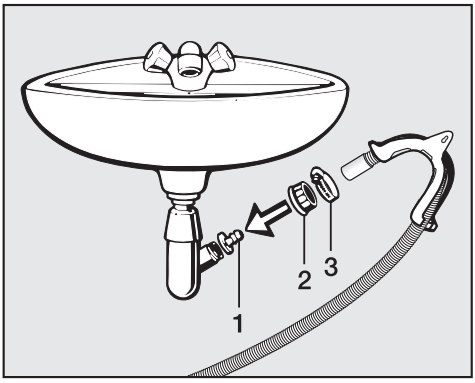

- Fit adapter **1** to the sink drain outlet using nut **2**.

If this nut has a flat disc in it you should take the disc out first. Important: if this nut has a washer or seal in it this must not be removed!

- Attach the end of the hose to adapter **1**.
- Use a screwdriver to tighten hose clip **3** up close to the nut.

If you no longer wish to use an external condensed water outlet

⚠ **Do not** push the drain hose back into the dryer. Doing this could cause it to become kinked and damaged in the dryer.

- Loop the drain hose up.
- Use a suitable cable tie to secure the looped hose to the back of the dryer, or simply lay the looped hose behind the dryer.
- Attach the open end of the drain hose back onto the holder at the back of the dryer at the top (see holder **2** in "Setting up the drain hose").

Electrical connection U.K.

All electrical work should be carried out by a suitably qualified and competent person, in strict accordance with current national and local safety regulations (BS 7671 in the UK).

Ensure power is not supplied to the appliance until after installation work has been carried out.

The appliance is supplied with a mains cable with moulded plug ready for connection to a 230-240V mains supply. Please ensure the connection data quoted on the data plate match the household mains supply.

Connection should be made via a suitable switched socket which is easily accessible after installation.

For extra safety it is advisable to protect the appliance with a suitable residual current device (RCD). Contact a qualified electrician for advice.

Do not connect via an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

Non-rewireable plugs BS 1363

The fuse cover must be refitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words on the base of the plug (as applicable to the design of plug fitted).

Replacement fuses should be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

WARNING: THIS APPLIANCE MUST BE EARTHED

Programme	Load	Final spin speed in a domestic washing machine	Energy	Duration
	kg*	rpm	kWh	Minutes
Cottons Normal	6.0	1000 (60 % residual moisture)**	3.40	96
		1200	3.10	88
		1400	2.90	84
		1600	2.80	81
		1800	2.55	74
Cottons Hand iron	6.0	1000 (60 % residual moisture)**	2.80	82
		1200	2.50	73
		1400	2.30	69
		1600	2.20	66
		1800	1.90	58
Minimum iron Normal	3.0	1200 (40 % residual moisture)**	1.25	39
Minimum iron Hand iron	3.0	1200	1.05	34
Automatic Normal	3.5	800	1.85	66
Shirts Normal	2.0	600	1.25	48
Woollens handcare	2.0	1000	0.15	4
Smoothing	3.0	1000	0.30	8
Cottons hygiene	6.0	1000	4.55	131
Minimum iron hygiene	3.0	1200	1.80	60
Pillows hygiene	1.2	1200	1.80	103

* Weight of dry laundry

** EN 61121:2005 test programme

All data without a "star" against it was calculated using EN 61121:2005.

Before testing in accordance with EN 61121, dry a 3 kg load of cotton laundry with 70% residual moisture as per the above standard using the Cottons Normal programme without any extra options.

Consumption data can vary from the nominal values given above depending on the size of the load, types of textiles, residual moisture levels after spinning, fluctuations in the electricity supply and any extra options selected.

Technical data

Height	850 mm (adjustable +7 / -7 mm)
Height for building under	820 mm
Width	595 mm
Depth	580 mm
Depth with door open	1,062 mm
Weight	52 kg
Drum volume	100 litres
Maximum capacity	6 kg dry weight
Capacity of condensed water container	approx. 3.5 l
Hose length	2 m
Maximum delivery head	1.50 m
Maximum drain hose length	4 m
Length of connection cable	2 m
Voltage	see data plate
Connected load	see data plate
Fuse rating (UK)	see data plate / plug
Lamp wattage	see data plate
Energy consumption	see "Consumption data" section
Test certificates awarded	see data plate

Programmable functions for changing default settings

The programmable functions are used to alter the tumble dryer´s electronics to suit changing requirements.
Programmable functions can be altered at any time.

Altering the residual moisture level in the Cottons programme

The tumble dryer is designed to dry effectively using as little energy as possible.
However, if you require the laundry to be drier or damper, you can reduce or increase the default residual moisture in the Cottons programme.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the *Start/Stop* button lights up constantly . . .

❸ . . . and then release the *Start/Stop* button.

– The *Low temperature* indicator light will flash once briefly.

A **number** to show which option is selected will appear in the display alternating with the letter *P*.

0 **Increased residual moisture. Laundry damper.**

1 **Standard residual moisture (factory default setting).**
(the *Automatic* indicator light will also flash once).

2 **Reduced residual moisture. Laundry drier.**
(the *Automatic* indicator light will also flash twice).

❹ Pressing the *Start/Stop* button switches between the options.

❺ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

- Carry out steps ❶ to ❸.
- Switch the dryer off after step ❸.

Altering the residual moisture level in the Minimum iron programme

The tumble dryer is designed to dry effectively using as little energy as possible.
However, if you require the laundry to be drier or damper, you can reduce or increase the default residual moisture in the Minimum iron programme.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the *Start/Stop* button lights up constantly . . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button once.

– The *Low temperature* indicator light will flash twice briefly.

A **number** to show which option is selected will appear in the display alternating with the letter *P*.

0 **Increased residual moisture. Laundry damper.**

1 **Standard residual moisture (factory default setting).**
(the *Automatic* indicator light will also flash once).

2 **Reduced residual moisture. Laundry drier.**
(the *Automatic* indicator light will also flash twice).

❺ Pressing the *Start/Stop* button switches between the options.

❻ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Anti-crease

Anti-crease helps prevent creasing, if laundry is not normally removed immediately after the end of a programme.

The anti-crease function

– is activated when the tumble dryer is delivered. You can shorten the duration of the anti-crease phase or deactivate it if wished.

– is used in all programmes except *Woollens handcare*.

– should be left activated.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the *Start/Stop* button lights up constantly . . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button twice.

– The *Low temperature* indicator light will flash 3 times briefly.

A **number** to show which option is selected will appear in the display alternating with the letter *P*.

0 **Anti-crease off**

1 **1 hour anti-crease**
(the *Automatic* indicator light will also flash once).

2 **2 hours anti-crease**
(factory default setting)
(the *Automatic* indicator light will also flash twice).

❺ Pressing the *Start/Stop* button switches between the options.

❻ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Altering the volume of the buzzer

The buzzer has two volumes.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the *Start/Stop* button lights up constantly . . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button three times.

– The *Low temperature* indicator light will flash four times briefly.

A **number** to show which option is selected will appear in the display alternating with the letter *P*.

0 **Normal buzzer (factory default setting)**

1 **Loud buzzer** (the *Automatic* indicator light will also flash)

❺ Pressing the *Start/Stop* button switches between the options.

❻ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Altering the standard drying level in the Automatic programme

The tumble dryer is designed to dry effectively using as little energy as possible.
However, if you require the laundry to be drier or damper, you can reduce or increase the default residual moisture in the Automatic programme.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the *Start/Stop* button lights up constantly . . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button four times.

– The *Low temperature* indicator light will flash six times briefly.

A **number** to show which option is selected will appear in the display alternating with the letter *P*.

0 **Increased residual moisture. Laundry damper.**

1 **Standard residual moisture (factory default setting).**
(the *Automatic* indicator light will also flash once).

2 **Reduced residual moisture. Laundry drier.**
(the *Automatic indicator light will also flash twice).*

❺ Pressing the *Start/Stop* button switches between the options.

❻ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Extending the cooling down time

The cooling down phase which takes place before the end of a programme can be extended by 5 or 10 minutes, if required. This makes the garments easier to handle.

The cooling down time can only be extended for programmes with drying levels.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the *Start/Stop* button lights up constantly . . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button five times.

– The *Low temperature* indicator light will flash seven times briefly.

A **number** to show which option is selected will appear in the display alternating with the letter *P*.

0 **Cooling down time not extended (factory default setting)**

1 **Cooling down time extended by five minutes**
(the *Automatic* indicator light will also flash once).

2 **Cooling down time extended by ten minutes**
(the *Automatic* indicator light will also flash twice).

❺ Pressing the *Start/Stop* button switches between the options.

❻ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Standby

To save energy, the display and the programme sequence/check lights go out after 10 minutes and the *Start/Stop* button starts flashing slowly.

To come out of standby mode

- Turn the programme selector or press a button. Neither will have any effect if a programme is running.

Factory default

The standby function is activated and the display and programme sequence/check lights will go out after 10 minutes:

– if a programme is not selected after the dryer has been switched on.

– after a programme has started.

They will, however, come on for 10 minutes after a delay start time has counted down, at the end of the programme or the end of the anti-crease phase.
The buzzer (if selected) will sound for 10 minutes at the end of the programme.

Instead of the factory default setting you can select another option:

Not in current programme

As described under "Factory default" above.
However, the display and programme sequence/check lights will stay on after the programme has started and remain visible during the programme.

Off

The display and programme sequence/check lights will stay on while the dryer is switched on.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

- See next page.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the *Start/Stop* button lights up constantly . . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button six times.

– The *Low temperature* indicator light will flash 8 times briefly.

A **number** to show which option is selected will appear in the display alternating with the letter *P*.

0 **Factory default setting**

1 **Not in current programme**
(the *Automatic* indicator light will also flash once).

2 **Off**
(the *Automatic* indicator light will also flash twice).

❺ Pressing the *Start/Stop* button switches between the options.

❻ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Memory function

The electronics will memorise any extra options selected for a programme. The duration selected for the Warm air or Cool air timed drying programmes will also be stored in memory.
These settings will be selected automatically the next time the programme is chosen. You can either accept these or change them by pressing the appropriate button.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the *Start/Stop* button lights up constantly . . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button seven times.

– The *Low temperature* indicator light will flash 9 times briefly.

A **number** to show which option is selected will appear in the display alternating with the letter *P*.

0 **Memory deactivated (factory default setting)**

1 **Memory activated**
(the *Automatic* indicator light will also flash)

❺ Pressing the *Start/Stop* button switches between the options.

❻ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Clean out airways indicator

Fluff should be removed after drying. The *Clean out airways* indicator will remind you to clean the filters when a certain amount of fluff has collected in the filters. You can decide at what level of fluff this reminder should be given.

You will have an idea of how often this should be done after a few drying programmes.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the *Start/Stop* button lights up constantly . . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button eight times.

– The *Low temperature* indicator light will flash on and off slowly once.

A **number** to show which option is selected will appear in the display alternating with the letter *P*.

0 ***Clean out airways*** **indicator light is deactivated**

1 ***Clean out airways*** **indicator light comes on when there is a heavy build-up of fluff**
(the *Automatic* indicator light will also flash once).

2 **Factory default setting**
(the *Automatic* indicator light will also flash twice).

3 ***Clean out airways*** **indicator light comes on when there is only a light build-up of fluff**
(the *Automatic* indicator light will also flash three times).

❺ Pressing the *Start/Stop* button switches between the options.

❻ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Keypad tone

An audible tone sounds each time a button is pressed.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the *Start/Stop* button lights up constantly . . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button nine times.

– The *Low temperature* indicator light will flash on and off slowly once and then on and off quickly once.

A **number** to show which option is selected will appear in the display alternating with the letter *P*.

0 **Keypad tone deactivated (factory default setting)**

1 **Keypad tone activated** (the *Automatic* indicator light will also flash)

❺ Pressing the *Start/Stop* button switches between the options.

❻ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Adjusting the dryer's electronics for very soft water

⚠ In some areas of the UK, water is extremely soft which can affect the sensitivity of the control electronics. If the dryer is installed in an area of very soft water, you should contact your local water supplier for information and advice regarding water hardness and water conductivity. If the water conductivity is less than 150 µS, the following programmable function will need to be activated.

Important. This programmable function should not be activated if, despite the water being extremely soft (as would be the case if a water softener were used), its conductivity is greater than 150 µS.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.
– The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the *Start/Stop* button lights up constantly . . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button ten times.

– The *Low temperature* indicator light will flash on and off slowly once and then on and off quickly twice.

A **number** to show which option is selected will appear in the display alternating with the letter *P*.

0 **Factory default setting**

1 **Adjusted for very soft water** (the *Automatic* indicator light will also flash)

❺ Pressing the *Start/Stop* button switches between the options.

❻ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

- Carry out steps ❶ to ❹.
- Switch the dryer off after step ❹.

Extending the range of the drying levels

You can extend the range of the drying levels for many of the programmes:
Machine iron+
(drier than Machine iron).
Slightly dry
(drier than Hand iron).
Normal+
(drier than Normal).

This programmable function is only available for programmes with drying levels.

Follow the steps (❶,❷,❸ ...) to programme and store in memory.

Before you begin, ensure that:

– The tumble dryer is switched off.

– The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the *Start/Stop* button lights up constantly . . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button eleven times.

– The *Low temperature* indicator light will flash on and off slowly once and then on and off quickly three times.

A **number** to show which option is selected will appear in the display alternating with the letter *P*.

0 **Default setting**

1 **Drying level range extended**
(the *Automatic* indicator light will also flash).

❺ Pressing the *Start/Stop* button switches between the options.

❻ Switch the dryer off.

The setting you have selected is now stored in memory. You can change it again at any time.

To check the setting:

■ Carry out steps ❶ to ❹.

■ Switch the dryer off after step ❹.

To select the extended drying level

■ Select a programme.

■ Press the drying level button repeatedly until the following indicator lights come on.

– Indicator lights *Extra dry* and *Normal* = Normal+

– Indicator lights *Normal* and *Hand iron* = Slightly dry

– Indicator lights *Hand iron* and *Machine iron* = Machine iron+

United Kingdom
Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Tel: 0845 365 0555
Fax: 0845 365 0777
Customer Contact Centre Tel: 0845 365 6600
E-mail: info@miele.co.uk
Internet: www.miele.co.uk

Australia
Miele Australia Pty. Ltd.
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: (03) 9764 7130, Fax: (03) 9764 7149
Internet: www.miele.com.au

China
Miele Shanghai
Suite 4105-06, Plaza 66
1266 Nanjing Road West
Jing An District
Shanghai 200040, PRC
Tel: +86 21 6288 4200, Fax: +86 21 6288 4100
E-mail: mieleshanghai@cn.miele.com
Internet: www.miele.cn

Miele (Hong Kong) Limited
41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay
Hong Kong
Tel: (852) 2610 1331
Fax: (852) 2610 1013
Email: mielehk@miele.com.hk

India
Miele Appliances India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola
New Delhi – 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in
Internet: www.miele.in

Germany - Miele & Cie. KG
Carl-Miele-Straße 29, 33332 Gütersloh

Ireland
Miele Ireland Ltd.
Broomhill Road, Tallaght, Dublin 24
Tel: (01) 461 0710, Fax: (01) 461 07 97
E-Mail: info@miele.ie
Internet: www.miele.ie

New Zealand
Miele New Zealand Limited
Unit L, 10-20 Sylvia Park Road
Mt. Wellington, 1060, Auckland, NZ
Tel: 0800 264 353, Fax: 0800 463 453
Internet: www.miele.co.nz

Singapore
Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: infosea@miele.com.sg
Internet: www.miele.sg

South Africa
Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: +27 (0) 11 548-1900
Fax: +27 (0) 11 548-1935
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates
Miele Appliances Ltd.
P.O. Box 11 47 82
Gold & Diamond Park
Sheikh Zayed Road
Building 6 / Offices Nos. 6-214 to 6-220
Dubai
Tel: +971-4-341 84 44
Fax: +971-4-341 88 52
E-Mail: info@miele.ae
Internet: www.miele.ae

Alteration rights reserved/0110

M.-Nr. 07 729 440 / 00

CE